


BALUSTER SYSTEM – (Install Details)

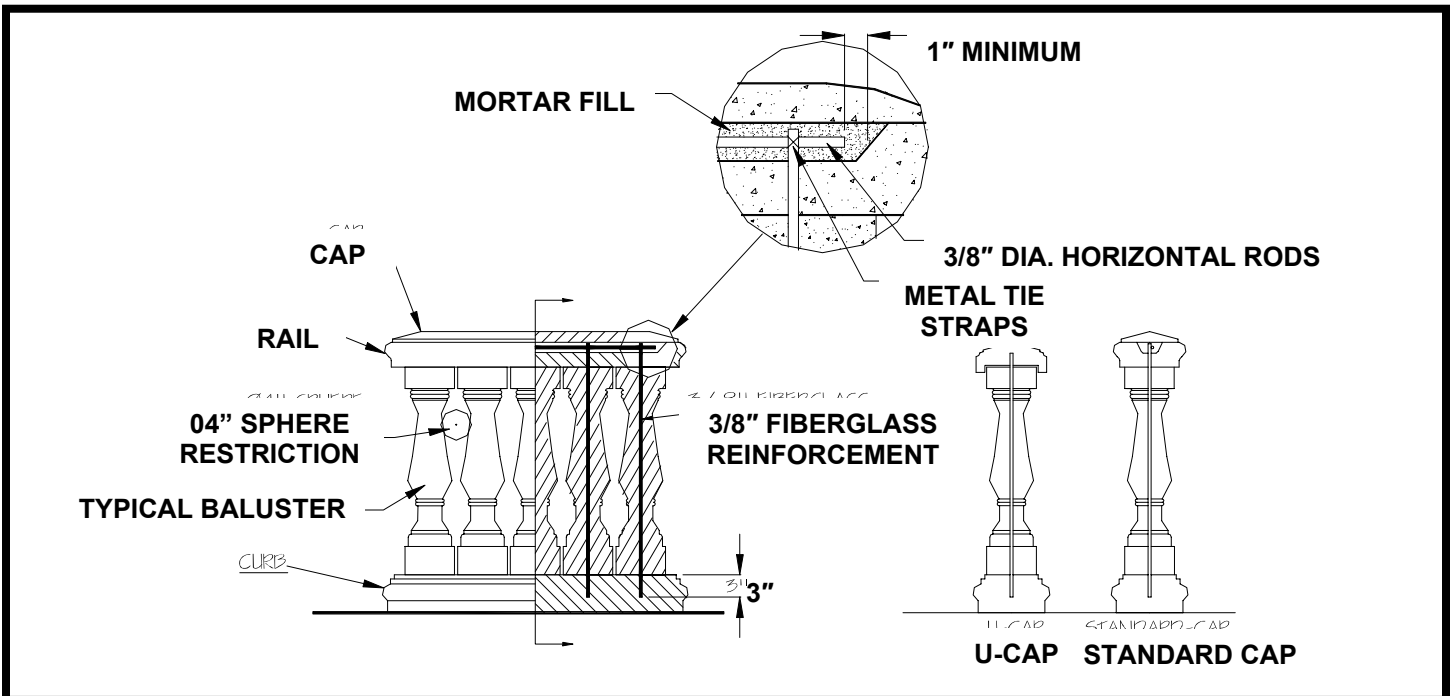

TYPICAL BALUSTER SYSTEM – (INSTALLATION DETAILS)

- Start by measuring to determine the on centerline of each baluster.
- Use fiberglass pins to set firmly to the mounting surface.
- Drill mounting surface (and/or mounting riser) at proper centerline 7 1/4" for 4" sphere code. All holes should be no larger than 1/4 of an inch over the mounting pin. Cut pin to correct length (minimum of 3" long)
- Each piece must be set in appropriate adhesive (Thin set, masons mortar or epoxy glue). Color to be the same shade as the finished product.
- All units must be level and true.
- Do not install any pieces which have damage or imperfections.
- Mortar cap to top of baluster, level and true with all details to match.
- For U-Shaped cap, run continuous rebar horizontally.
- Tie vertical rebar to horizontal rebar.
- Fill U-Shaped area with masons mortar.
- Install top cap to finish.

Page 02



D&J Architectural Precast

Design, Manufacture, and Install

3517 Dora Street • Fort Myers, FL. • Ph: (239) 461-5387 • Fax: (239) 461-8701 • Visit us at www.diap.net